

# DIAL TEST INDICATOR UNIVERSAL HOLDER



6297-1

**Code**

6297-1

- Set the indicators at the desired attitude to the workpiece

